

<b>Part Number</b>	<b>Description</b>
02FC135	WASHER
1698	FITTING
4079	FILTER
439212	FUEL SENDER
030-2350-07	CONNECTOR
047-076-104-001	POPPET-V
047-076-107-001	SPRING V
047-076-111-001	SPRING V
047-110-021-001	BLADE BOLT (WOOD BLADES)
047-110-021-005	BLADE BOLT, METAL BLADE
047-110-239-009	COUNTERWEIGHT 2.18
047-110-249-001	WASHER
047-110-250-013	BLADE,MR
047-110-250-021	BLADE,MR
047-110-254-001A	PLATE,CO
047-110-304-001	LINK
047-110-360-003	STRIP, ABRASIVE
047-110-360-003A	STRIP, ABRASIVE
047-110-363-103S	TAB ASSY
047-110-372-001	BRACE ASSEMBLY
047-110-373-001	CLEVIS
047-110-375-001	BUSHING,
047-110-375-003	BUSHING
047-110-375-005	BUSHING
047-110-375-009	BUSHING
047-110-375-011	BUSHING
047-110-378-001	ROD, COUNTERWEIGHT
047-110-379-001	SPACER
047-120-014-023	RING ASY
047-120-025-009	SCREW
047-120-025-011	LINK ASSEMBLY
047-120-025-013	ROD END
047-120-042-001	SCREW
047-120-113-003	SEAL ASY
047-120-114-001	SPACER
047-120-117-007	CORE
047-120-126-005	PITCH HORN
047-120-126-107	PITCH HORN
047-120-128-001	BEAM ASY
047-120-135-005	M/R GRIP OLD STYLE WOOD BLADE
047-120-135-107	M/R GRIP WOOD BLADE
047-120-137-001	SEAL
047-120-138-001	CAP ASSY
047-120-141-001	PIN ASSY
047-120-142-001	WASHER
047-120-151-002	RING
047-120-155-001	BOLT
047-120-163-007	PILLOW BLOCK

047-120-177-001	MR YOKE
047-120-178-001	NUT
047-120-179-001	SPACER
047-120-182-001	RING
047-120-183-001	ADAPTER, OLD STYLE
047-120-183-103	ADAPTER NUT
047-120-184-005	STOP ASSEMBLY
047-120-185-001	SPACER
047-120-190-005	BEARING
047-120-249-001	WEIGHT
047-120-250-001	SPRING
047-120-252-011	MR GRIP (HR)
047-120-252-115	MR GRIP METAL BLADES
047-120-253-001	BOLT
047-120-262-005	BUMPER ASSEMBLY
047-120-265-001	LOCK
047-120-265-003	LOCK
047-120-417-001	BEARING
047-120-417-003	BEARING
047-130-105-003	WASHER
047-130-113-001	PLUG
047-130-114-013	STUD
047-130-116-001	LOCKNUT
047-130-117-001	LOCKWASH
047-130-118-001	WASHER
047-130-134-001	WASHER
047-140-020-001	WASHER
047-140-021-001	STUD
047-140-023-001	SPRING
047-140-025-001	CAP
047-140-112-011	FRAME
047-140-117-001	ROD ASSY
047-140-117-002	ROD
047-140-117-003	END
047-140-119-001	NUT
047-140-134-101	CLAMP SET
047-140-138-001	PLUG ASSY
047-140-139-001	PLATE
047-140-143-011	LINK ASY
047-140-144-001	CLEVIS
047-140-154-001	SPACER
047-140-158-001	LEVER
047-140-159-007	LINK ASY
047-140-237-003	LINK
047-140-238-001	BEARING
047-140-246-005	LINK
047-140-247-002	NUT
047-140-247-003	NUT
047-140-250-001	FRAME

047-140-251-001	FRAME STABILIZER DAMPER SUPPORT
047-140-253-001	BEARING
047-140-254-101	WASHER
047-140-255-101	BEARING
047-140-257-101	BEARING
047-140-258-101	RACE,IN
047-150-018-001	SHAFT
047-150-034-001	SEAL
047-150-113-002	FORK ASY
047-150-114-001	ARM ASSY
047-150-117-013	WELD,SLV
047-150-119-001	LOCKNUT
047-150-122-003	YOKE
047-150-133-001	SPACER
047-150-152-010	SUPPORT
047-150-180-009	RING ASY
047-150-202-001	WASHER
047-150-206-003	SHIELD, CONTROL PLATE BEARING INNER RING
047-150-208-001	SCREW, STOP
047-150-212-001	INSERT
047-150-212-003	BEARING
047-150-213-001	PIN
047-150-214-001	SEAL
047-150-241-005	LOCKWASH
047-150-242-001	BEARING
047-150-243-001	BEARING
047-150-244-001	BEARING
047-150-246-001	SWIVEL ASSY
047-150-247-001	LINK, SWASHPLATE DRIVE
047-150-249-005	SCISSORS
047-150-250-001	THRUST WASHER
047-150-251-001	BEARING
047-150-253-001	RACE
047-150-253-003	RACE
047-150-254-001	THRUST WASHER
047-150-255-005	ROD ASSY
047-150-260-003	BUSHING
047-150-261-001	WASHER
047-150-262-101	BEARING
047-260-013-085	SPRING
047-266-038-015A	TUBE ASY
047-267-070-001	HORN
047-267-085-005	BRACE
047-267-085-006	BRACE
047-267-085-022	TAB
047-267-085-023	FIN ASSY
047-267-106-013	ELEVATOR
047-267-129-001	LEVER AS
047-267-132-001	SLEEVE

047-267-132-003	SLEEVE
047-267-133-001	ARM
047-267-134-001	LINK ASY
047-267-137-003	TUBE
047-267-141-001	BUSHING
047-267-144-001	LINK ASY
047-267-145-001	LEVER
047-267-149-001	WASHER
047-267-402-009	BRACKET
047-267-456-001	CLIP ASY
047-267-481-001	CABLE
047-267-481-005	CABLE
047-267-481-013	CABLE
047-267-482-005	CABLE AS
047-267-482-009	CABLE AS
047-267-482-013	CABLE
047-267-486-001	BRACKET
047-267-490-001	CABLE
047-267-490-009	CABLE
047-315-008-003	BOOT
047-322-012-003	BRACKET
047-322-231-003	RETAINER
047-323-050-023	FIREWALL
047-323-062-003	DECAL
047-340-197-101	SEAL
047-351-019-001	STRAP
047-360-138-012	SPACER
047-360-176-045	STRIP
047-360-181-011	ANGLE, LH
047-360-181-026S	FAIRING
047-360-181-051	TUBE
047-360-181-153	BUBBLE ASSEMBLY NARROW
047-360-181-189	BUBBLE ASSEMBLY WIDE
047-360-181-224	REINFORC
047-360-181-225	REINFORC
047-380-153-013	SEAL
047-380-153-035	SEAL
047-380-153-049	STRIP
047-380-153-053	BLUE WINDOW ASSY LH
047-380-153-083	SEAL
047-382-115-004S	HINGE, TOP RIGHT
047-382-116-002	HINGE AS
047-382-116-009	HINGE
047-382-116-010	HINGE
047-382-116-011	HINGE, BOTTOM LEFT
047-382-116-012	HINGE, BOTTOM RIGHT
047-382-116-015	HINGE AS
047-385-146-001	LATCH AS
047-385-148-001	SPACER

047-385-148-002	SPACER
047-385-149-001	BLOCK
047-385-149-002	BLOCK
047-385-165-003	SPRING
047-500-003-015	SKID TUBE
047-500-004-001	LEG ASSY LH FWD
047-500-004-002	LEG ASSY RH FWD
047-500-004-009	LEG ASSY LH AFT
047-500-005-013	PIN
047-500-005-016	SPACER
047-500-005-025	AXLE ASY
047-500-005-026	AXLE ASY
047-500-006-003	SHOE ASY
047-500-007-003	SHOE
047-500-008-004	BEARING
047-500-011-003S	CROSS TUBE HD
047-500-013-001	SHOE ASY
047-500-013-002	SHOE ASY
047-500-022-007	BOOT
047-500-025-011	CROSS TUBE, CURVED
047-500-027-001	PLUG ASY
047-500-043-011	STEP
047-500-043-012	STEP
047-530-016-017	TAIL ROTOR GUARD
047-530-016-019	PLUG
047-530-018-001	STRAP
047-530-022-003	WEIGHT
047-600-803-005S	SCOOP
047-612-026-001	WASHER
047-612-053-001	BUSHING
047-612-115-003	GASKET
047-612-123-003	GUARD
047-612-144-021	CABLE AS
047-612-145-023	LINK
047-612-152-007	PIN ASSY
047-612-166-001	LINK
047-612-167-015	SPINDLE
047-612-171-123S	MOUNT
047-612-172-007	RETAINER
047-612-174-001	PLATE
047-612-175-001	BUSHING
047-612-176-001	BOLT
047-612-177-001	LINK ASY
047-612-191-001	BRACE AS
047-612-200-001	BUSHING
047-612-312-001	CABLE ASSY
047-612-318-001	BRACKET
047-612-319-001	BRACKET
047-612-321-001	FITTING

047-612-322-001	ROD ASSY
047-612-800-035	GASKET
047-612-800-039	ADAPTER PLATE
047-612-808-025	CABLE ASSY
047-612-808-033	CABLE ASSY
047-614-031-003	BRACE
047-614-037-005	EXTENSION
047-614-053-001	CLAMP
047-614-053-003	CLAMP
047-614-055-001	EXHAUST
047-614-061-057	TUBE ASY
047-614-802-043	MANIFOLD
047-615-004-001	GASKET
047-615-050-009	SPRING
047-615-050-013	SPRING
047-615-074-005	DUCT
047-615-074-013	DUCT
047-615-074-017	DUCT
047-615-074-019	DUCT
047-615-074-041	DUCT
047-615-114-031	SHROUD A
047-615-114-035	SHROUD A
047-615-115-041	WASHER
047-615-119-035	INTAKE A
047-615-122-001	GASKET
047-615-124-003	BRACE
047-615-125-003	SUPPORT
047-615-158-001	WASHER
047-615-160-039	SEAL
047-615-172-005	SEAL
047-615-211-001	GASKET
047-615-217-001	CLAMP
047-615-801-003	CLAMP AS
047-615-801-039	CLAMP AS
047-620-011-001	CASE
047-620-205-001	RETAINER
047-620-218-003	BOLT
047-620-227-001	PIN
047-620-228-001	PIN
047-620-229-004	STUD
047-620-230-002	STUD
047-620-234-002	STUD
047-620-235-001	PACKING
047-620-242-001	SHIM
047-620-243-001	GASKET
047-620-247-001	SLEEVE
047-620-249-001	SPACER
047-620-250-001	SHIM
047-620-251-001	GASKET

047-620-255-001	GASKET
047-620-256-001	CORK
047-620-256-002	CORK
047-620-256-003	CORK
047-620-278-003	HOUSING
047-620-280-002	STUD
047-620-293-002	CAP ASSY
047-620-299-001	WASHER
047-620-302-001	WASHER
047-620-344-002	RACE
047-620-349-002	RACE
047-620-374-001	GASKET
047-620-426-001	WASHER
047-620-426-003	WASHER
047-620-426-007	WASHER
047-620-426-009	WASHER
047-620-472-001	BEARING
047-620-472-003	BEARING
047-620-485-009	SHEAR SCREW
047-620-494-005	COUPLING
047-620-497-001	FAN DRIVE GEAR SET
047-620-498-001	SHIM SET
047-620-498-003	SHIM
047-620-499-001	WASHER
047-620-517-005	CAGE
047-620-518-001	CAGE
047-620-523-003	GEAR ASY
047-620-529-001	WASHER
047-620-533-003	GUIDE
047-620-533-007	GUIDE
047-620-545-001	SHIM
047-620-547-001	BOLT
047-620-547-003	BOLT
047-620-549-001	GEAR ASY
047-620-552-001	BEARING
047-620-564-003	SPACER
047-620-565-003	NUT
047-620-567-001	WASHER
047-620-568-001	GEAR ASY
047-620-572-003	PULLEY
047-620-616-001	SPRING
047-620-616-005	SPRING
047-620-617-005	PLATE
047-620-617-007	PLATE
047-620-619-001	PIN, CLUTCH PIVOT
047-620-619-003	PIN, CLUTCH PIVOT
047-620-619-005	PIN, CLUTCH PIVOT
047-620-619-007	PIN, CLUTCH PIVOT
047-620-623-001	DRIVE AS

047-620-628-003	BEARING
047-620-629-001	BEARING
047-620-629-007	BEARING
047-620-659-101	BEARING
047-620-660-001	BEARING
047-620-662-001	BEARING
047-620-663-001	BEARING
047-620-665-001	ROLLER
047-620-666-001	ROLLER
047-620-667-001	BRAKE AS
047-620-671-001	GASKET
047-620-673-003	STRAINER
047-620-674-001	CUSHION
047-620-675-001	BUSHING
047-620-677-001	LOCK
047-620-678-001	TUBE ASY
047-620-679-001	TUBE ASY
047-620-680-001	BEARING
047-620-682-003	LINER
047-620-683-001	GEAR
047-620-684-001	DEFLECTO
047-620-689-001	SPIDER
047-620-691-003	DRUM
047-620-691-005	DRUM
047-620-692-001	PIN
047-620-693-001	BUSHING
047-620-694-007	SHOE, SE
047-620-697-001	NUT
047-620-698-001	SCREW
047-620-801-003	COUPLING
047-620-915-005	GEAR ASY
047-620-917-003	GEAR
047-620-923-003	JET ASSY
047-620-926-001	BEARING
047-620-927-001	BEARING
047-620-929-001	BEARING
047-620-935-003	SPRING
047-620-938-003	PINION
047-620-941-003	DRUM CLU
047-620-947-001	RACE
047-620-947-003	RACE
047-620-949-001	BOLT
047-620-952-001	ROLLER
047-620-960-001	SPIDER
047-620-961-001	SPIDER SET
047-620-961-007	SPIDER
047-620-962-001	GEAR
047-620-962-003	GEAR
047-620-963-001	RETAINER



047-620-964-001	ROLLER
047-620-967-001	ROLLER
047-620-968-001	CUSHION
047-620-969-001	BEARING
047-620-973-001	BEARING
047-620-977-001	RETAINER
047-620-979-001	NUT
047-620-981-003	SHAFT
047-620-981-005	SHAFT
047-620-982-001	WASHER
047-620-985-001	PINION A
047-620-989-001	SHIM
047-620-991-005	CASE ASY
047-620-992-001	FAN DRIVE OIL TUBE ASY
047-620-993-001	TUBE
047-620-994-001	TUBE ASSY
047-620-995-001	WASHER
047-620-997-101	DRUM
047-631-076-003	WASHER
047-631-079-009	HOUSING
047-631-081-001	SHAFT AS
047-631-083-001	LEVER
047-631-087-001	BEARING
047-631-090-006	BUSHING
047-631-093-003	HANDLE
047-631-093-004	END
047-631-098-001	END
047-631-099-001	NUT
047-631-102-001	WASHER
047-631-106-001	SHAFT
047-631-109-002	KNOB
047-631-111-002	BEARING
047-631-117-001	SHIM
047-631-119-001	SPACER
047-631-120-002	PLUG
047-631-121-007	CROSSTUB
047-631-122-002	ROD
047-631-124-005	CONTROL CABLE OVERALL LENGTH 110.0 INCHES
047-631-124-008	CONTROL, OVERHALL LENGTH 101.0 INCHES
047-631-149-001	NUT
047-631-164-003	CONTROL
047-631-193-001	GRIP
047-631-216-001	KEY
047-631-226-001	SPRING
047-631-240-011	BOX ASSY
047-631-246-001	TUBE ASY
047-631-247-001	JACKSHAFT SUPPORT ASSY
047-631-248-001	END
047-631-254-001	LEVER

047-631-261-001	LEVER
047-631-263-005	SHAFT
047-631-267-001	LEVER
047-631-269-001	CLEVIS
047-631-295-001	COVER
047-631-302-011	SLIDER
047-631-306-001	WASHER
047-631-332-001	CLEVIS
047-631-343-003	SLIP JOINT
047-631-346-011	SHAFT AS
047-631-346-013	SHAFT AS
047-631-346-023	SHAFT
047-631-346-029A	TUBE
047-631-348-003	ADAPTER
047-631-361-003	PLATE
047-631-374-001	CAM
047-631-384-001	BEARING
047-631-389-001	SHAFT
047-631-800-029	THROTTLE CABLE TUBE ASSEMBLY
047-631-801-001	CAM
047-640-006-005	BRACE
047-640-047-001	PLUG
047-640-055-007	EXTENSION TUBE
047-640-066-101	YOKE T/R
047-640-075-001	GEARBOX
047-641-096-001	SHIM
047-641-098-001	CONE SET
047-641-100-001	NUT
047-641-101-001	BOOT
047-641-102-001	CROSSHEAD
047-641-103-001	CAP ASSY
047-641-117-001	SPINDLE
047-641-121-001	CAP
047-641-122-001	SHIM
047-641-126-005	T/R YOKE
047-641-131-001	BEARING
047-641-149-005	NUT ASSY
047-641-161-001	BEARING
047-641-167-001	BEARING
047-641-171-003	BUSHING
047-641-172-005	LINK ASY
047-641-173-001	THRUST PLUG
047-641-175-001	RACE
047-641-176-001	TRUNNION ASSY
047-641-178-003	STOP
047-641-179-005	CONTROL
047-641-180-001	CONTROL
047-641-183-001	END ASSY
047-641-184-001	BEARING

047-641-186-001	WASHER
047-641-187-007	PITCH HORN
047-641-189-003	WASHER
047-641-190-103	WEIGHT
047-642-117-105	BLADE T/R
047-642-119-001	ABRASIVE
047-642-122-003	BLOCK
047-644-035-003	NUT
047-644-130-011	COUPLING
047-644-131-002	COUPLING
047-644-136-001	PLUG
047-644-148-015	HANGER A
047-644-149-001	RETAINER
047-644-170-001	HOUSING
047-644-171-001	SLEEVE
047-644-186-005	SHAFT AS
047-644-187-019	SHAFT AS
047-644-188-001	BEARING AND HOUSING ASSEMBLY
047-644-213-003	HOUSING
047-644-215-003	PIN
047-644-216-005	SHIM
047-644-216-007	SHIM
047-644-217-003	PLATE
047-644-220-001	COVER
047-644-233-009	SHAFT
047-644-234-003	EXTENSION TUBE SHAFT
047-644-234-101	TR DRIVE SHAFT ASSY
047-645-026-001	KEY
047-645-074-001	SHIM
047-645-075-001	SHIM
047-645-076-001	NUT
047-645-087-001	BEARING
047-645-088-001	BEARING
047-645-090-001	WASHER
047-645-093-001	KEY
047-645-204-005	SLEEVE A
047-645-205-003	SHAFT
047-645-206-003	WASHER
047-645-212-015	CASE ASY
047-645-213-001	SHIM
047-645-233-001	SIGHT GLASS
047-645-234-001	ADAPTER
047-645-238-003	BEARING
047-645-239-103	BEARING
047-645-266-001	CAP ASSY
047-645-269-001	SHAFT
047-645-270-001	GEAR
047-645-271-001	GEAR
047-645-272-001	SPACER

047-645-273-001	NUT
047-645-275-003	SPACER
047-661-029-007	FAN
047-661-031-001	BEARING, FAN DRIVE
047-661-032-003	BEARING
047-661-033-001	RETAINER
047-661-064-005	FAN PULL
047-661-801-007	PIN
047-661-801-021	PLATE
047-661-803-001	HANDLE
047-661-804-001	SPRING
047-661-805-003	RETAINER
047-662-073-001	SHROUD A
047-662-092-047	SHROUD A
047-662-095-001	SHROUD A
047-662-097-005	STRIP AS
047-662-097-009	STRIP AS
047-662-098-003	SHROUD
047-662-135-001	TUBE ASY
047-662-801-111	BAFFLE A
047-662-803-001	BAFFLE A
047-669-075-003	PULLEY
047-669-115-001	SPACER
047-669-124-005	RING
047-669-130-003	SUPPORT
047-670-036-067	TUBE ASY
047-670-039-001	FLANGE
047-670-051-031	TUBE ASY
047-670-091-001	TUBE ASY
047-670-813-003S	COOLER ASSY
047-674-012-001	GASKET
047-674-012-003	GASKET
047-679-005-001	FITTING
047-679-006-003	BRACKET
047-680-092-001	STRAINER
047-680-094-005	CLIP
047-682-046-001	GASKET
047-682-093-002	PAD
047-682-102-003	TUBE ASSY, TANK VENT RH
047-682-162-007	SUPPORT
047-682-172-013	GASKET
047-682-174-001	FIRESHIELD
047-682-183-003	STRAP
047-682-209-003	BLOCK SET
047-682-209-005	MOUNT
047-682-209-007	SUPPORT LH
047-682-209-008	SUPPORT RH
047-682-213-003	GASKET
047-682-218-001	FUEL TANK GASKET

047-682-218-003	FUEL TANK GASKET
047-682-224-001	VALVE BR
047-682-226-001	VALVE BR
047-682-227-001	BREAKAWA
047-686-001-359	TUBE
047-686-029-005	CROSSOVER
047-686-046-001	TUBE
047-686-049-001	TUBE
047-686-080-001	DRAIN LINE
047-690-004-037	TUBE ASY
047-691-011-001	CLAMP AS
047-691-021-013	TUBE
047-691-043-001	CLEVIS,R
047-691-074-001	VALVE
047-691-093-005	BOLT
047-691-143-005	CLAMP
047-691-152-007	CLAMP
047-691-158-001	SCREW
047-691-159-001	SPRING
047-691-164-003	CLAMP
047-691-164-005	CLAMP
047-691-186-001	CLAMP
047-691-209-001	TUBE ASY
047-691-246-001	TUBE ASY
047-691-248-001	TUBE ASY
047-706-046-019	HOOK ASY
047-706-607-007	BALLAST 1.0 LB
047-706-607-009	BALLAST 0.5 LB
047-710-085-003	SUPPORT
047-711-028-001	GAGE AIR
047-711-030-001	ALTIMETER
047-712-045-001	RESTRICT
047-714-011-011	TUBE
047-715-020-003	CARD
047-715-063-005	PANEL AS
047-721-014-005	BELL ASY
047-721-015-001	BELL ASY
047-721-022-001	NUT
047-721-023-001	SLEEVE
047-721-025-001	EXTENSION
047-721-036-001	GRIP
047-721-036-005	GRIP ASY
047-721-041-003	EXTENSION
047-721-112-001	LEVER
047-722-055-003	LEVER
047-722-249-001	ADAPTER FWD
047-722-249-003	ADAPTER AFT
047-722-261-001	PULLEY A
047-722-269-029	CABLE AS

047-722-269-033	CABLE AS
047-722-270-001	CABLE AS
047-722-270-021	CABLE AS
047-722-273-025	CONTROL
047-722-273-029	CABLE ASSY
047-722-273-101	CABLE AS
047-722-284-001	BRACKET
047-722-285-001	BRACKET
047-722-288-001	TUBE
047-722-290-021	CABLE
047-722-296-101	STOP ASY
047-722-296-102	STOP ASY
047-723-030-015	SWITCH A
047-723-036-001	SLEEVE
047-724-015-007	HOUSING
047-724-075-001	SHIM
047-724-076-001	BOLT
047-724-076-003	BOLT
047-724-097-009	BELLCRANK
047-724-138-003	SUPPORT
047-724-149-009	TUBE ASY
047-724-149-017	TUBE ASY
047-724-149-031	TUBE ASY
047-724-149-033	TUBE ASY
047-724-210-001	LEVER AS
047-725-001-007	RING
047-725-049-001	PLATE
047-725-114-001	BELLCRANK
047-725-117-001	ROD ASSY
047-725-845-001	SPACER
047-725-853-005	PIN
047-725-867-001	BRACKET
047-725-870-001	TUBE ASY
047-725-874-011	LEVER AS
047-725-876-007	TUBE
047-725-876-009	TUBE ASY
047-725-879-001	BUSHING
047-725-884-005	SUPPORT
047-725-885-001	BUSHING
047-725-917-013	TUBE ASY
047-725-923-001	TUBE ASY
047-725-924-001	LEVER AS
047-725-925-001	CONED WASHER
047-726-003-003	CONTROL
047-727-013-002	CRANK
047-727-031-001	PIN
047-727-031-002	PIN
047-727-049-001	SPACER
047-727-051-003	ROD END

047-727-051-004	ROD END
047-727-109-001	TUBE ASY
047-727-110-001	TUBE ASY
047-727-163-007	BEARING
047-727-163-009	BUSHING
047-727-167-001	BELLCRANK
047-727-179-001	TUBE ASY
047-727-188-005	IDLER AS
047-729-047-003	SUPPORT
047-729-072-001	PLATE
047-729-078-001	SCREW
047-729-085-002	LEVER AS
047-729-145-003	BRACKET
047-729-157-001	TUBE ASY
047-729-157-013	TUBE ASY
047-731-033-005	CLAMP SE
047-731-099-001	EYEBOLT
047-733-186-001	DECAL
047-739-032-001	BOOT
047-739-132-001	CLEAT
047-739-175-001	CLAMP
047-739-304-001	SUPPORT
047-739-364-001	GUARD AS
047-739-399-001	BELT-GRE
047-739-399-003	SEAT BEL
047-739-480-001	DOUBLER
047-739-672-001	ANGLE
047-739-672-003	ANGLE
047-739-673-001	CHANNEL
047-739-703-001	LINK
047-750-082-021	BRACKET
047-751-001-001	BUS BAR S/N 2556 AND SUB
047-752-055-004	BRACE
047-752-097-031	TUBE
047-752-097-045	TUBE ASY
047-752-098-001	ANGLE
047-752-103-005	TUBE
047-752-113-013	PAD
047-752-121-001	SUPPORT
047-753-057-011	TUBE
047-755-138-001	LANDING LIGHT SHIELD S/N 2556 & SUB
047-756-066-013	THERMOCO
047-756-197-011	CABLE AS
047-759-030-001	TUBE
047-759-066-001	SUPPORT
047-759-073-001	WASHER
047-759-081-057	DECAL
047-760-058-001	JUMPER
047-796-006-024	DECAL

047-796-006-033	DECAL
047-796-006-076	STENCIL
047-796-089-004	DECAL
047-796-092-001	DECAL
047-796-107-001	DECAL
047-796-107-003	DECAL
047-796-115-001	DECAL
047-796-135-003	USABLE FUEL 41 GAL. DECAL (FUEL GAGE MARKING)
047-796-138-001	DECAL-HYDRAULIC
047-796-143-001	DECAL
047-796-154-001	DECAL
047-796-159-001	DECAL
047-796-164-001	DECAL
047-796-164-003	DECAL
047-796-175-001	DECAL
047-796-180-001	DECAL
047-796-180-003	STARTER RELAY DECAL
047-796-191-001	DECAL
047-796-229-001	DECAL
047-796-262-001	STENCIL
047-796-274-001	DECAL
047-796-278-001	DECAL
047-796-279-001	EXT. PWR 28 VOLTS DC DECAL
047-796-281-001	USABLE FUEL 41 GAL GRADE 80/87 DECAL (ON FUEL TANK
047-796-282-001	BATTERY LOCATION DECAL
047-796-284-001	HYD FLIGHT CONTR. PULL TO BYPASS, DECAL
047-796-287-001	DECAL, MANIFOLD PRESSURE WOOD BLADES
047-796-288-001	DECAL
047-796-289-001	FOR EMERGENCY EXIT LH JETISONABLE DOOR
047-796-289-002	FOR EMERGRNCY EXIT RH JETISONABLE DOOR DECAL
047-796-299-001	DECAL
047-796-299-002	DECAL
047-796-303-001	DECAL
047-796-310-001	MANIFOLD PRESSURE, METAL BLADES DECAL
047-796-317-001	DECAL
047-796-319-001	DECAL
047-796-320-001	DECAL
047-796-327-003	DECAL
047-796-328-001	DECAL
047-796-330-001	OPERATED IN COMPLIANCE DECAL METAL BLADES
047-796-337-001	DECAL
047-796-341-003	MAX ALLOWABLE BALLAST 24 LBS DECAL
047-796-351-001	DECAL
047-796-353-003	DECAL
047-796-353-007	DECAL
047-796-354-003	DECAL
047-796-354-005	DECAL
047-796-354-007	DECAL
047-796-356-003	METAL-CA



047-796-357-001	DECAL
047-796-358-001	DECAL
047-796-363-001	DECAL
047-796-364-001	DECAL
047-796-365-001	DECAL
047-796-366-001	DECAL
047-796-367-001	STENCIL
047-796-376-001	DECAL
047-796-379-001	DECAL
047-796-379-003	DECAL
047-796-393-003	DECAL
047-796-397-001	DECAL-NO SMOKING
047-796-398-001	DECAL
047-796-399-001	TOTAL USEABLE FUEL 29 GAL 100/130 OCT. DECAL
047-796-407-003	DECAL
047-796-408-001	MAX. BALLAST AND EQUIPMENT 50 LBS
047-796-410-001	DECAL, 47G5
047-796-410-003	DECAL, 47G5A
047-796-411-001	DECAL, 47G3B2
047-796-412-001	DECAL 47G4-A
047-796-413-001	DECAL, BELL
047-796-414-001	DECAL-WARNING
061-103-120-001	WEIGHT
061-310-086-015	SPRING
061-431-251-001	ADAPTER
061-725-057-001	SLEEVE
100-035-123-23	PIN
100-035-72-14	PIN
100-046S64B1	PLUG BUTTON
10-176485-241	VIBRATOR
110-034-1	EXTRU
120-012-10A	SLEEVE
120-031-18-11	SHIM
12347Y146.0	SHAFT
12347Y71.0	FLEX SHAFT
130-002L-6	TRUNNION
130-002R-6	TRUNNION
169AE909-7L	LOADMETE
169AE910-42L	GAGE FUE
1841-1-5616	PIN, CRI
21-006-152	CONTROL
21-006-8-33	BUSHING
21-008-12-13.5	BUSHING
21-011-18-27	BUSHING
22-007-19-11-18	BUSHING
22-010-31-15-24	BUSHING
2229A	SCREEN
24502-225	CLAMP
2716-00	THERMOMETER

30-005-15	CLAMP
30-005-25	CLAMP
31-042-46CHF	NO HAND HOLD DECAL
31-079-1	FAN WARNING
31-079-2	FAN WARNING
31-081-1	NO STEP-BREAKAWAY VALVE DECAL
31-081-2	NO STEP-BREAKAWAY VALVE DECAL
35001-2	CAP
427-030-451-101	FITTING ASSEMBLY
456-1	BUSHING
45C20AA18	CLAMP
45C20AA-D10	CLAMP
45C20AA-D16	CLAMP
45C20AAD8	CLAMP
465C63NWS	VALVE
47-150-103-5T210	TOOL PLUG
47DG200-1	BUBBLE NARROW CLEAR
47DG200-3	BUBBLE NARROW BLUE
47DG200-5	BUBBLE WIDE CLEAR
47DG200-7	BUBBLE WIDE BLUE
54H19650	SEATBELT
71X7095	SEAL
74-140-245-3	CLEVIS
74-140-252-3	THREADED ROD END BEARING
74-140-252-5	SOLID ROD END BEARING
74-140-843-11	ROD
74-140-914-31	LEVER ASSEMBLY
74-140-951-5	PLATE ASSEMBLY
74-150-709-25	LOWER NO BAR ROD
74-150-949-9	SCISSOR ASSEMBLY
74-360-181-1B	WASP BUBBLE BLUE TINT
74-612-153-1M	SH2348SW IMPROVED SPRAG
74-612-167-17	SPINDLE
74-612-171-123C	ENGINE MOUNT *
74-612-322-3	ROD
74-612-867-17	SPINDLE
74-661-041-11M	FAN BELT MATCHED SET
7740-00403	FUEL SENDER
7740-00404	FUEL SENDER
A5-30	STUD
AN804-5	TEE
AN804-6	TEE
AN806-6	PLUG
AN815-8	UNION
AS5174J0808	UNION
B543DD	BEARING
BA-103	FILTER CARTRIDGE
CA-047-96-022-1	SAFETY WASHER KIT
CCA4850	DRAINCOK

F4-30	FASTENER
GB1616	BEARING
HFR4W	BEARING
HP600-3-9	COVER
J5567-12	SHOCK MOUNT
J5567-13	SHOCK MOUNT (USE BELOW 10 DEG F)
J5736-13	SHOCK MOUNT
J-5736-13	LORD ENGINE MOUNT
LR387	LOCK RNG
MS16625-1087	RING
MS20270B10	U-JOINT
MS24510-5	CKT BRKR
MS25083-2BC5	JUMPER
MS25241-4553	LAMP
MS28034-1	TMP BULB
MS91586-2	SHUNT
NAS302R77-3504	CABLE
NAS303R24-1081	CABLE
NAS303R24-1306	CABLE
NAS303R27-0852	CABLE
P380AV	FUEL TRANSMITTER
P4K	BEARING
S80-902-2	TURNBUCKLE
SB47-110-363-103	TRIM TAB ASSEMBLY
SB47-110-372-001	DRAG BRACE ASSEMBLY
SB47-110-378-001	ROD-TIE, COUNTERWEIGHT
SB47-120-126-107	PITCH HORN
SB47-120-177-001	MR YOKE
SB47-120-190-005	BEARING, MR HUB-GIMBAL
SB47-120-250-001	SPRING, DYNAMIC FLAP RESTRAINT
SB47-120-253-001	BOLT
SB47-130-105-003	WASHER, MAST BASE PLUG
SB47-130-116-001	LOCKNUT, MAST
SB47-150-034-001	SEAL
SB47-150-243-001	BEARING
SB47-150-253-003	RACE
SB47-150-254-001	THRUST WASHER
SB47-500-011-007	HD CROSS TUBE ASSY
SB47-612-152-011	PIN ASSEMBLY
SB47-612-321-001	FITTING-SPRAG SUPPORT
SB47-615-074-017	DUCT
SB47-620-228-001	LOWER PINION PIN
SB47-620-235-001	SEAL, TRANS CASE RING
SB47-620-243-001	GASKET-GENERATOR
SB47-620-485-009	SHEAR SCREW, ROTOR DRIVING FLANGE
SB47-620-517-005	CAGE, ROLLER BEARING
SB47-620-616-005	SPRING
SB47-620-619-001	PIN, CLUTCH PIVOT
SB47-620-619-003	PIN, CLUTCH PIVOT

SB47-620-619-005	PIN, CLUTCH PIVOT
SB47-620-628-003	BEARING, INPUT SHAFT TRANSMISSION
SB47-620-671-001	GASKET
SB47-620-680-001	BEARING
SB47-620-689-001	SPIDER
SB47-620-692-001	CUTCH SHOE PIVOT PIN
SB47-620-801-003	COUPLING
SB47-620-929-001	BEARING
SB47-620-961-001	SPIDER SET
SB47-620-964-001	ROLLER
SB47-620-968-001	CUSHION, FREE WHEELING SPRING
SB47-620-969-001	BEARING
SB47-631-254-001	LEVER OUTPUT, CAMBOX
SB47-631-302-011	SLIDER, SLIP JOINT THROTTLE CONTROL
SB47-631-348-003	ADAPTER OUTPUT SHAFT THROTTLE CONTROL
SB47-631-800-029	THROTTLE CABLE TUBE ASSEMBLY
SB47-640-055-007	EXTENSION TUBE, TAIL ROTOR
SB47-641-101-001	BOOT
SB47-641-126-005	TR YOKE
SB47-641-176-001	TRUNNION ASSEMBLY, TAIL ROTOR
SB47-641-183-001	BEARING, TR PITCH LINK
SB47-641-184-001	BEARING
SB47-644-215-003	PIN
SB47-644-220-001	BOOT, TAIL ROTOR GREASE
SB47-644-232-009	SHAFT ASSY, TAIL ROTOR DRIVE
SB47-644-234-101	SHAFT ASSY, TR DRIVE
SB47-645-238-003	BEARING
SB47-645-239-103	BEARING, TAIL ROTOR DRIVE SHAFT
SB47-645-270-001	PINION, SPIRAL BEVEL TR
SB47-645-275-003	SPACER, TAIL ROTOR GEARBOX
SB47-661-031-001	BEARING, COOLING FAN
SB47-682-093-002	PAD-TANK CUSHION
SB47-682-174-001	FIRESHIELD
SB47-682-218-001	GASKET, FUEL TANK
SB47-682-218-003	GASKET, FUEL TANK
SB47-722-270-021	CABLE ASSY
SB47-722-273-029	CABLE ASSEMBLY
SB47-722-273-101	CABLE ASSY
SB47-727-031-001	PIN, COLLECTIVE PITCH CONTROL
SB47-727-049-001	SPACER, COLLECTIVE PITCHBELLCRANK ASSY
SB47-727-051-003	ROD END BEARING
SB47-727-051-004	ROD END BEARING
T100089	HOISTING RING
W101P3R28	SWITCH