

Part Number	Description	Part Number	Description
02FC135	WASHER	047-645-271-001	GEAR
1698	FITTING	047-645-272-001	SPACER
030-2350-07	CONNECTOR	047-645-273-001	NUT
030-612-040-001	BUSHING	047-645-275-003	SPACER
047-076-104-001	POPPET-V	047-661-029-007	FAN
047-076-107-001	SPRING V	047-661-032-003	BEARING
047-076-111-001	SPRING V	047-661-033-001	RETAINER
047-110-021-001	BLADE BOLT	047-661-064-005	FAN PULL
047-110-021-003	BLADE BOLT	047-661-801-007	PIN
047-110-021-005	BLADE BOLT	047-661-801-021	PLATE
047-110-239-009	COUNTERWEIGHT 2.18	047-661-803-001	HANDLE
047-110-249-001	WASHER	047-661-804-001	SPRING
047-110-250-013	BLADE,MR	047-661-805-003	RETAINER
047-110-250-021	BLADE,MR	047-662-073-001	SHROUD A
047-110-250-023	BLADE,MR	047-662-092-047	SHROUD A
047-110-254-001A	PLATE,CO	047-662-095-001	SHROUD A
047-110-304-001	LINK	047-662-097-005	STRIP AS
047-110-360-003A	STRIP	047-662-097-009	STRIP AS
047-110-372-001	BRACE ASSEMBLY	047-662-098-003	SHROUD
047-110-373-001	CLEVIS	047-662-135-001	TUBE ASY
047-110-375-001	BUSHING,	047-662-801-111	BAFFLE A
047-110-375-003	BUSHING	047-662-803-001	BAFFLE A
047-110-375-005	BUSHING	047-669-075-003	PULLEY
047-110-375-009	BUSHING	047-669-115-001	SPACER
047-110-375-011	BUSHING	047-669-124-005	RING
047-110-379-001	SPACER	047-669-130-003	SUPPORT
047-120-014-023	RING ASY	047-670-036-067	TUBE ASY
047-120-023-001	CONE	047-670-039-001	FLANGE
047-120-025-009	SCREW	047-670-051-031	TUBE ASY
047-120-025-011	LINK ASSEMBLY	047-670-091-001	TUBE ASY
047-120-025-013	ROD END	047-670-813-003S	COOLER A
047-120-042-001	SCREW	047-674-012-001	GASKET
047-120-113-003	SEAL ASY	047-674-012-003	GASKET
047-120-114-001	SPACER	047-679-005-001	FITTING
047-120-117-007	CORE	047-679-006-003	BRACKET
047-120-128-001	BEAM ASY	047-680-092-001	STRAINER
047-120-135-005	M/R GRIP OLD STYLE WOOD BLADE	047-680-094-005	CLIP
047-120-135-107	M/R GRIP WOOD BLADE	047-680-121-001	STRAINER
047-120-137-001	SEAL	047-682-046-001	GASKET
047-120-138-001	CAP ASSY	047-682-093-002	PAD
047-120-141-001	PIN ASSY	047-682-102-003	TUBE
047-120-142-001	WASHER	047-682-162-007	SUPPORT
047-120-151-002	RING	047-682-172-013	GASKET
047-120-155-001	BOLT	047-682-183-003	STRAP
047-120-163-007	PILLOW BLOCK	047-682-209-003	BLOCK SET
047-120-178-001	NUT	047-682-209-005	MOUNT
047-120-179-001	SPACER	047-682-209-007	SUPPORT LH
047-120-182-001	RING	047-682-209-008	SUPPORT RH
047-120-183-001	ADAPTER, OLD STYLE	047-682-213-001	GASKET
047-120-183-103	ADAPTER NUT	047-682-213-003	GASKET
047-120-184-005	STOP ASSEMBLY	047-682-224-001	VALVE BR

047-120-185-001	SPACER	047-682-226-001	VALVE BR
047-120-249-001	WEIGHT	047-682-227-001	BREAKAWA
047-120-252-115	MR GRIP METAL BLADES	047-686-001-359	TUBE
047-120-262-005	BUMPER ASSEMBLY	047-686-029-005	CROSSOVER
047-120-265-001	LOCK	047-686-046-001	TUBE
047-120-265-003	LOCK	047-686-049-001	TUBE
047-120-417-001	BEARING	047-686-080-001	DRAIN LINE
047-120-417-003	BEARING	047-690-004-037	TUBE ASY
047-130-105-003	WASHER	047-691-011-001	CLAMP AS
047-130-113-001	PLUG	047-691-021-013	TUBE
047-130-114-013	STUD	047-691-043-001	CLEVIS,R
047-130-116-001	LOCKNUT	047-691-074-001	VALVE
047-130-117-001	LOCKWASH	047-691-093-005	BOLT
047-130-134-001	WASHER	047-691-143-005	CLAMP
047-140-018-003	STAB BAR CORE	047-691-152-007	CLAMP
047-140-020-001	WASHER	047-691-158-001	SCREW
047-140-021-001	STUD	047-691-159-001	SPRING
047-140-023-001	SPRING	047-691-164-003	CLAMP
047-140-025-001	CAP	047-691-164-005	CLAMP
047-140-112-011	FRAME	047-691-186-001	CLAMP
047-140-117-001	ROD ASSY	047-691-209-001	TUBE ASY
047-140-117-002	ROD	047-691-246-001	TUBE ASY
047-140-117-003	END	047-691-248-001	TUBE ASY
047-140-119-001	NUT	047-706-046-019	HOOK ASY
047-140-134-101	CLAMP	047-706-607-007	BALLAST 1.0 LB
047-140-138-001	PLUG	047-706-607-009	BALLAST 0.5 LB
047-140-139-001	PLATE	047-710-085-003	SUPPORT
047-140-143-011	LINK ASY	047-711-018-003	GAGE FUEL
047-140-144-001	CLEVIS	047-711-028-001	GAGE AIR
047-140-154-001	SPACER	047-711-030-001	ALTIMETER
047-140-158-001	LEVER	047-712-045-001	RESTRICT
047-140-159-007	LINK ASY	047-714-011-011	TUBE
047-140-237-003	LINK	047-715-020-003	CARD
047-140-238-001	BEARING	047-715-063-005	PANEL AS
047-140-243-001	BEARING	047-721-014-005	BELL ASY
047-140-246-005	LINK	047-721-015-001	BELL ASY
047-140-247-002	NUT	047-721-022-001	NUT
047-140-247-003	NUT	047-721-023-001	SLEEVE
047-140-250-001	FRAME	047-721-025-001	EXTENSION
047-140-251-001	FRAME STABILIZER DAMPER SUP	047-721-036-001	GRIP
047-140-253-001	BEARING	047-721-036-005	GRIP ASY
047-140-254-101	WASHER	047-721-041-003	EXTENSION
047-140-255-101	BEARING	047-721-053-001	BUSHING
047-140-257-101	BEARING	047-721-112-001	LEVER
047-140-258-101	RACE,IN	047-722-055-003	LEVER
047-150-018-001	SHAFT	047-722-249-001	ADAPTER FWD
047-150-113-002	FORK ASY	047-722-249-003	ADAPTER AFT
047-150-114-001	ARM ASSY	047-722-261-001	PULLEY A
047-150-117-013	WELD,SLV	047-722-269-029	CABLE AS
047-150-119-001	LOCKNUT	047-722-269-033	CABLE AS
047-150-122-003	YOKE	047-722-269-101	CABLE AS
047-150-133-001	SPACER	047-722-270-001	CABLE AS

047-150-140-001	NUT	047-722-273-025	CONTROL
047-150-152-010	SUPPORT	047-722-273-101	CABLE AS
047-150-180-009	RING ASY	047-722-284-001	BRACKET
047-150-186-005	BOOT	047-722-285-001	BRACKET
047-150-202-001	WASHER	047-722-288-001	TUBE
047-150-206-003	SHIELD	047-722-290-021	CABLE
047-150-208-001	SCREW, STOP	047-722-296-101	STOP ASY
047-150-212-001	INSERT	047-722-296-102	STOP ASY
047-150-212-003	BEARING	047-723-030-015	SWITCH A
047-150-213-001	PIN	047-723-036-001	SLEEVE
047-150-214-001	SEAL	047-724-015-007	HOUSING
047-150-241-005	LOCKWASH	047-724-075-001	SHIM
047-150-242-001	BEARING	047-724-076-001	BOLT
047-150-244-001	BEARING	047-724-076-003	BOLT
047-150-245-001	BEARING	047-724-097-009	BELLCRANK
047-150-246-001	SWIVEL ASSY	047-724-138-003	SUPPORT
047-150-247-001	LINK	047-724-141-001	BUSHING
047-150-249-005	SCISSORS	047-724-149-009	TUBE ASY
047-150-250-001	THRUST WASHER	047-724-149-017	TUBE ASY
047-150-251-001	BEARING	047-724-149-031	TUBE ASY
047-150-253-001	RACE	047-724-149-033	TUBE ASY
047-150-255-005	ROD ASSY	047-724-210-001	LEVER AS
047-150-260-003	BUSHING	047-725-001-007	RING
047-150-261-001	WASHER	047-725-049-001	PLATE
047-150-262-101	BEARING	047-725-114-001	BELLCRANK
047-150-263-101	BEARING	047-725-117-001	ROD ASSY
047-260-013-085	SPRING	047-725-845-001	SPACER
047-266-038-015A	TUBE ASY	047-725-853-005	PIN
047-267-070-001	HORN	047-725-867-001	BRACKET
047-267-085-005	BRACE	047-725-870-001	TUBE ASY
047-267-085-006	BRACE	047-725-874-011	LEVER AS
047-267-085-022	TAB	047-725-876-007	TUBE
047-267-085-023	FIN ASSY	047-725-876-009	TUBE ASY
047-267-106-013	ELEVATOR	047-725-879-001	BUSHING
047-267-129-001	LEVER AS	047-725-884-005	SUPPORT
047-267-132-001	SLEEVE	047-725-885-001	BUSHING
047-267-132-003	SLEEVE	047-725-917-013	TUBE ASY
047-267-133-001	ARM	047-725-923-001	TUBE ASY
047-267-134-001	LINK ASY	047-725-924-001	LEVER AS
047-267-137-003	TUBE	047-725-925-001	CONED WASHER
047-267-141-001	BUSHING	047-726-003-003	CONTROL
047-267-144-001	LINK ASY	047-727-013-002	CRANK
047-267-145-001	LEVER	047-727-031-002	PIN
047-267-149-001	WASHER	047-727-033-001	PIN
047-267-402-009	BRACKET	047-727-109-001	TUBE ASY
047-267-456-001	CLIP ASY	047-727-110-001	TUBE ASY
047-267-481-001	CABLE	047-727-163-007	BEARING
047-267-481-005	CABLE	047-727-163-009	BUSHING
047-267-481-013	CABLE	047-727-167-001	BELLCRANK
047-267-482-005	CABLE AS	047-727-179-001	TUBE ASY
047-267-482-009	CABLE AS	047-727-188-005	IDLER AS
047-267-482-013	CABLE	047-729-047-003	SUPPORT

047-267-486-001	BRACKET	047-729-072-001	PLATE
047-267-490-001	CABLE	047-729-078-001	SCREW
047-267-490-009	CABLE	047-729-085-002	LEVER AS
047-315-008-003	BOOT	047-729-099-001	SUPPORT ASSY
047-322-012-003	BRACKET	047-729-145-003	BRACKET
047-322-231-003	RETAINER	047-729-157-001	TUBE ASY
047-323-050-023	FIREWALL	047-729-157-013	TUBE ASY
047-323-062-003	DECAL	047-731-033-005	CLAMP SE
047-323-073-005	SEAL	047-731-099-001	EYEBOLT
047-323-107-001	FIREWALL	047-733-186-001	DECAL
047-340-197-101	SEAL	047-739-032-001	BOOT
047-351-019-001	STRAP	047-739-132-001	CLEAT
047-360-138-012	SPACER	047-739-175-001	CLAMP
047-360-176-045	STRIP	047-739-304-001	SUPPORT
047-360-181-011	ANGLE	047-739-364-001	GUARD AS
047-360-181-025S	FAIRING	047-739-399-001	BELT-GRE
047-360-181-026S	FAIRING	047-739-399-003	SEAT BEL
047-360-181-051	TUBE	047-739-480-001	DOUBLER
047-360-181-153	BUBBLE ASSEMBLY NARROW	047-739-672-001	ANGLE
047-360-181-189	BUBBLE ASSEMBLY WIDE	047-739-672-003	ANGLE
047-360-181-224	REINFORC	047-739-673-001	CHANNEL
047-360-181-225	REINFORC	047-739-703-001	LINK
047-380-153-013	SEAL	047-750-082-021	BRACKET
047-380-153-035	SEAL	047-751-001-001	BUS BAR S/N 2556 AND SUB
047-380-153-049	STRIP	047-752-055-004	BRACE
047-380-153-053	BLUE WINDOW ASSY LH	047-752-097-031	TUBE
047-380-153-063	SOCKET	047-752-097-045	TUBE ASY
047-380-153-064	SOCKET	047-752-098-001	ANGLE
047-380-153-083	SEAL	047-752-103-005	TUBE
047-382-115-004S	HINGE, TOP RIGHT	047-752-113-013	PAD
047-382-115-009S	HINGE, TOP LEFT	047-752-121-001	SUPPORT
047-382-116-002	HINGE AS	047-753-057-011	TUBE
047-382-116-009	HINGE	047-755-138-001	LNDG LIGHT SHIELD S/N 2556 & SUB
047-382-116-010	HINGE	047-756-066-013	THERMOCO
047-382-116-011	HINGE, BOTTOM LEFT	047-756-197-011	CABLE AS
047-382-116-012	HINGE, BOTTOM RIGHT	047-759-030-001	TUBE
047-382-116-015	HINGE AS	047-759-060-001	RESISTOR
047-385-143-003	SHAFT	047-759-066-001	SUPPORT
047-385-144-004	PIN	047-759-073-001	WASHER
047-385-146-001	LATCH AS	047-759-081-057	DECAL
047-385-147-001	HANDLE	047-760-058-001	JUMPER
047-385-147-002	HANDLE	047-796-006-024	DECAL
047-385-148-001	SPACER	047-796-006-033	DECAL
047-385-148-002	SPACER	047-796-006-076	STENCIL
047-385-149-001	BLOCK	047-796-089-004	DECAL
047-385-149-002	BLOCK	047-796-092-001	DECAL
047-385-165-003	SPRING	047-796-107-001	DECAL
047-385-179-001	HANDLE	047-796-107-003	DECAL
047-500-003-015	SKID TUBE	047-796-115-001	DECAL
047-500-004-001	LEG ASSY LH FWD	047-796-143-001	DECAL
047-500-004-002	LEG ASSY RH FWD	047-796-154-001	DECAL
047-500-004-009	LEG ASSY LH AFT	047-796-159-001	DECAL

047-500-005-013	PIN	047-796-164-001	DECAL
047-500-005-016	SPACER	047-796-164-003	DECAL
047-500-005-025	AXLE ASY	047-796-175-001	DECAL
047-500-005-026	AXLE ASY	047-796-180-001	DECAL
047-500-006-003	SHOE ASY	047-796-180-003	DECAL
047-500-007-003	SHOE	047-796-191-001	DECAL
047-500-008-004	BEARING	047-796-229-001	DECAL
047-500-011-003S	CROSS TUBE HD	047-796-262-001	STENCIL
047-500-013-001	SHOE ASY	047-796-274-001	DECAL
047-500-013-002	SHOE ASY	047-796-278-001	DECAL
047-500-022-007	BOOT	047-796-279-001	DECAL
047-500-025-011	CROSS TUBE, CURVED	047-796-281-001	DECAL
047-500-027-001	PLUG ASY	047-796-282-001	DECAL
047-500-043-011	STEP	047-796-284-001	DECAL
047-500-043-012	STEP	047-796-287-001	DECAL, MANIFOLD PRESSURE
047-530-016-019	PLUG	047-796-288-001	DECAL
047-530-018-001	STRAP	047-796-289-001	DECAL
047-530-022-003	WEIGHT	047-796-289-002	DECAL
047-600-803-005S	SCOOP	047-796-299-001	DECAL
047-612-026-001	WASHER	047-796-299-002	DECAL
047-612-053-001	BUSHING	047-796-303-001	DECAL
047-612-115-003	GASKET	047-796-310-001	DECAL
047-612-123-003	GUARD	047-796-317-001	DECAL
047-612-144-021	CABLE AS	047-796-319-001	DECAL
047-612-145-023	LINK	047-796-320-001	DECAL
047-612-166-001	LINK	047-796-327-003	DECAL
047-612-167-015	SPINDLE	047-796-328-001	DECAL
047-612-172-007	RETAINER	047-796-330-001	DECAL
047-612-174-001	PLATE	047-796-337-001	DECAL
047-612-175-001	BUSHING	047-796-341-003	STENCIL
047-612-176-001	BOLT	047-796-351-001	DECAL
047-612-177-001	LINK ASY	047-796-353-003	DECAL
047-612-191-001	BRACE AS	047-796-353-007	DECAL
047-612-200-001	BUSHING	047-796-354-003	DECAL
047-612-312-001	CABLE ASSY	047-796-354-005	DECAL
047-612-318-001	BRACKET	047-796-354-007	DECAL
047-612-319-001	BRACKET	047-796-356-003	METAL-CA
047-612-322-001	ROD ASSY	047-796-357-001	DECAL
047-612-800-035	GASKET	047-796-358-001	DECAL
047-612-800-039	ADAPTER	047-796-363-001	DECAL
047-612-808-025	CABLE ASSY	047-796-364-001	DECAL
047-612-808-033	CABLE ASSY	047-796-365-001	DECAL
047-614-031-003	BRACE	047-796-366-001	DECAL
047-614-037-005	EXTENSION *	047-796-367-001	STENCIL
047-614-053-001	CLAMP	047-796-376-001	DECAL
047-614-053-003	CLAMP	047-796-379-001	DECAL
047-614-055-001	EXHAUST	047-796-379-003	DECAL
047-614-061-057	TUBE ASY *	047-796-393-003	DECAL
047-614-802-041	MANIFOLD	047-796-398-001	DECAL
047-614-802-043	MANIFOLD	047-796-399-001	STENCIL
047-615-004-001	GASKET	047-796-407-003	DECAL
047-615-050-009	SPRING	047-796-408-001	STENCIL

047-615-050-013	SPRING	047-796-410-001	DECAL, 47G5
047-615-074-005	DUCT	047-796-410-003	DECAL, 47G5A
047-615-074-013	DUCT	047-796-411-001	DECAL, 47G3B2
047-615-074-019	DUCT	047-796-412-001	DECAL 47G4-A
047-615-074-041	DUCT	047-796-413-001	DECAL, BELL
047-615-114-031	SHROUD A	061-103-120-001	WEIGHT
047-615-114-035	SHROUD A	061-310-086-015	SPRING
047-615-115-041	WASHER	061-431-251-001	ADAPTER
047-615-119-035	INTAKE A	061-725-057-001	SLEEVE
047-615-122-001	GASKET	100-035-123-23	PIN
047-615-124-003	BRACE	100-035-72-14	PIN
047-615-125-003	SUPPORT	100-046S64B1	PLUG BUTTON
047-615-158-001	WASHER	10-176485-241	VIBRATOR
047-615-160-039	SEAL	110-034-1	EXTRU
047-615-172-005	SEAL	120-012-10A	SLEEVE
047-615-211-001	GASKET	120-031-18-11	SHIM
047-615-217-001	CLAMP	12347Y146.0	SHAFT
047-615-801-003	CLAMP AS	12347Y71.0	FLEX SHAFT
047-615-801-039	CLAMP AS	130-002L-6	TRUNNION
047-620-011-001	CASE	130-002R-6	TRUNNION
047-620-205-001	RETAINER	1450-161	MUFF. KIT 47G2, G2A, G2A1, G5, G5A
047-620-210-005	RETAINER	1451	MUFFLER ASSEMBLY
047-620-218-003	BOLT	169AE909-7L	LOADMETE
047-620-227-001	PIN	169AE910-42L	GAGE FUE
047-620-229-004	STUD	1841-1-5616	PIN, CRI
047-620-230-002	STUD	21-006-152	CONTROL
047-620-234-002	STUD	21-006-8-33	BUSHING
047-620-242-001	SHIM	21-008-12-13.5	BUSHING
047-620-243-001	GASKET	21-011-18-27	BUSHING
047-620-247-001	SLEEVE	22-007-19-11-18	BUSHING
047-620-249-001	SPACER	22-010-31-15-24	BUSHING
047-620-250-001	SHIM	2229A	SCREEN
047-620-251-001	GASKET	24502-225	CLAMP
047-620-255-001	GASKET	2716-00	THERMOMETER
047-620-256-001	CORK	30-005-15	CLAMP
047-620-256-002	CORK	30-005-25	CLAMP
047-620-256-003	CORK	31-042-46CHF	NO HAND HOLD DECAL
047-620-278-003	HOUSING	31-079-1	FAN WARNING
047-620-280-002	STUD	31-079-2	FAN WARNING
047-620-293-002	CAP ASSY	31-081-1	NO STEP-BREAKAWAY VALVE DECAL
047-620-299-001	WASHER	31-081-2	NO STEP-BREAKAWAY VALVE DECAL
047-620-302-001	WASHER	35001-2	CAP
047-620-344-002	RACE	431-9R	CAP
047-620-349-002	RACE	456-1	BUSHING
047-620-374-001	GASKET	45C20AA18	CLAMP
047-620-426-001	WASHER	45C20AA-D10	CLAMP
047-620-426-003	WASHER	45C20AA-D16	CLAMP
047-620-426-007	WASHER	45C20AAD8	CLAMP
047-620-426-009	WASHER	465C63NWS	VALVE
047-620-472-001	BEARING	47-150-103-5T210	TOOL PLUG
047-620-472-003	BEARING	475C61NWS	VALVE
047-620-494-005	COUPLING	475C63NWS	VALVE

047-620-497-001	FAN DRIVE GEAR SET	47G2AG2A1G3G3BG3B1	IPB 47G-2A, G-2A-1, G-3, G-3B, G-3B-1
047-620-498-001	SHIM SET	4H003-1111-2	CONTROL
047-620-498-003	SHIM	54H19650	SEATBELT
047-620-499-001	WASHER	71X7095	SEAL
047-620-518-001	CAGE	74-110-845-105	FITTING
047-620-523-003	GEAR ASY	74-110-935-103	CLEVIS
047-620-529-001	WASHER	74-120-183-101	ADAPTER NUT
047-620-533-003	GUIDE	74-120-252-101	MAIN ROTOR GRIP
047-620-533-007	GUIDE	74-140-005-18-18-6	WASHER
047-620-545-001	SHIM	74-140-005-18-18-8	WASHER
047-620-547-001	BOLT	74-140-134-1M	CLAMP SET
047-620-547-003	BOLT	74-140-843-11	ROD
047-620-549-001	GEAR ASY	74-140-843-9	CONTROL ROD ASSEMBLY
047-620-552-001	BEARING	74-140-914-25	SPACER
047-620-564-003	SPACER	74-140-914-31	LEVER ASSEMBLY
047-620-565-003	NUT	74-140-951-5	PLATE ASSEMBLY
047-620-567-001	WASHER	74-150-117-13M	C/P SLEEVE; WELD ASSY
047-620-568-001	GEAR ASY	74-150-259-11	SHIM
047-620-572-003	PULLEY	74-150-259-3M	CONTROL INSTALLATION (NO BAR KIT)
047-620-616-001	SPRING	74-150-709-23	ROD ASSEMBLY
047-620-617-005	PLATE	74-150-709-25	LOWER NO BAR ROD
047-620-617-007	PLATE	74-150-949-9	SCISSOR ASSEMBLY
047-620-619-001	PIN, CLUTCH PIVOT	74-360-181-1B	WASP BUBBLE BLUE TINT
047-620-619-007	PIN, CLUTCH PIVOT	74-612-153-5M	SPRAG KIT, STC SH2348SW
047-620-623-001	DRIVE AS	74-612-171-123C	ENGINE MOUNT *
047-620-629-001	BEARING	74-612-322-3	ROD
047-620-629-007	BEARING	74-612-867-17	SPINDLE
047-620-633-005	SLEEVE	74-661-041-11M	FAN BELT MATCHED SET
047-620-659-101	BEARING	7740-00403	FUEL SENDER
047-620-660-001	BEARING	A5-30	STUD
047-620-662-001	BEARING	AN804-5	TEE
047-620-663-001	BEARING	AN804-6	TEE
047-620-665-001	ROLLER	AN806-6	PLUG
047-620-666-001	ROLLER	AN815-8	UNION
047-620-667-001	BRAKE AS	AS5174J0808	UNION
047-620-673-003	STRAINER	ASB-BUNDLE	ALERT SERVICE BULLETIN DVDonly
047-620-674-001	CUSHION	B543DD	BEARING
047-620-675-001	BUSHING	BA-103	FILTER CARTRIDGE
047-620-677-001	LOCK	CA-047-96-022-1	SAFETY WASHER KIT
047-620-678-001	TUBE ASY	CCA4850	DRAINCOK
047-620-679-001	TUBE ASY	F4-30	FASTENER
047-620-682-003	LINER	FM47D1	FLIGHT MANUAL 47D-1
047-620-683-001	GEAR	FM47D1HP200	FLIGHT MANUAL 47D-1 200 HP
047-620-684-001	DEFLECTO	FM47G	FLIGHT MANUAL 47G
047-620-691-003	DRUM	FM47G2	FLIGHT MANUAL 47G-2
047-620-691-005	DRUM	FM47G2A	FLIGHT MANUAL 47G-2A
047-620-692-001	PIN	FM47G2A1	FLIGHT MANUAL 47G-2A-1
047-620-693-001	BUSHING	FM47G3	FLIGHT MANUAL 47G-3
047-620-694-007	SHOE, SE	FM47G3B	FLIGHT MANUAL 47G-3B
047-620-697-001	NUT	FM47G3B1	FLIGHT MANUAL 47G-3B-1
047-620-698-001	SCREW	FM47G3B2	FLIGHT MANUAL 47G-3B-2
047-620-915-005	GEAR ASY	FM47G3B2A	FLIGHT MANUAL 47G-3B-2A

047-620-917-001	GEAR	FM47G4	FLIGHT MANUAL 47G-4
047-620-917-003	GEAR	FM47G4A	FLIGHT MANUAL 47G-4A
047-620-923-003	JET ASSY	FM47G5	FLIGHT MANUAL 47G-5
047-620-926-001	BEARING	FM47G5A	FLIGHT MANUAL 47G-5A
047-620-927-001	BEARING	FM47H1	FLIGHT MANUAL 47H-1
047-620-935-003	SPRING	FM47J	FLIGHT MANUAL 47J
047-620-938-003	PINION	FM47J2	FLIGHT MANUAL 47J-2
047-620-941-003	DRUM CLU	FM47J2A	FLIGHT MANUAL 47J-2A
047-620-947-001	RACE	GB1616	BEARING
047-620-947-003	RACE	HFR4W	BEARING
047-620-949-001	BOLT	HP600-3-9	COVER
047-620-952-001	ROLLER	IL-BUNDLE	INFORMATION LETTER BUNDLE
047-620-960-001	SPIDER	IPB47B-B3-D-D1-G	IPB 47B, B3, D,D-1,G
047-620-961-007	SPIDER	IPB47G-2	IPB 47G-2
047-620-962-001	GEAR	IPB47G3B2-G3B2A	IPB 47G-3B-2, G-3B-2A
047-620-962-003	GEAR	IPB47G4-G4A	IPB 47G-4, G-4A
047-620-963-001	RETAINER	IPB47G5-G5A	IPB 47G-5, G-5A
047-620-964-001	ROLLER	IPB47H1	IPB 47H-1
047-620-967-001	ROLLER	IPB47J	IPB 47-J
047-620-968-001	CUSHION	IPB47J2-J2A	IPB 47J-2, J-2A
047-620-969-001	BEARING	J5567-12	SHOCK MOUNT
047-620-973-001	BEARING	J5567-13	SHOCK MOUNT (USE BELOW 10 DEG F)
047-620-975-001	BEARING	LOGBOOK	LOGBOOK
047-620-977-001	RETAINER	LR387	LOCK RNG
047-620-979-001	NUT	MO47D-1-G-G2	M&O MANUAL 47D-1, G, G-2
047-620-981-003	SHAFT	MO47G2A-G2A1	M&O MANUAL 47G-2A, G-2A-1
047-620-981-005	SHAFT	MO47G-3	M&O MANUAL 47G-3
047-620-982-001	WASHER	MO47G3B2	M&O MANUAL 47G-3B-2
047-620-985-001	PINION A	MO47G-3B-2A	M&O MANUAL 47G-3B-2A
047-620-989-001	SHIM	MO47G3B-G3B1	M&O MANUAL 47G-3B, G-3B-1
047-620-991-005	CASE ASY	MO47G4-G4A	M&O MANUAL 47G-4, G-4A
047-620-992-001	FAN DRIVE OIL TUBE ASY	MO47G5	M&O MANUAL 47G-5
047-620-993-001	TUBE	MO47G5A	M&O MANUAL 47G-5A
047-620-994-001	TUBE ASSY	MO47H1	M&O MANUAL 47H-1
047-620-995-001	WASHER	MO47J	M&O MANUAL 47-J
047-620-997-101	DRUM	MO47J2-J2A	M&O MANUAL 47J-2, J-2A
047-631-076-003	WASHER	MS16625-1087	RING
047-631-079-009	HOUSING	MS20270B10	U-JOINT
047-631-081-001	SHAFT AS	MS24510-5	CKT BRKR
047-631-083-001	LEVER	MS25038-2	GENERATOR
047-631-087-001	BEARING	MS25083-2BC5	JUMPER
047-631-090-006	BUSHING	MS25241-4553	LAMP
047-631-093-003	HANDLE	MS28034-1	TMP BULB
047-631-093-004	END	MS91586-2	SHUNT
047-631-098-001	END	NAS302R77-3504	CABLE
047-631-099-001	NUT	NAS303R24-1081	CABLE
047-631-102-001	WASHER	NAS303R24-1306	CABLE
047-631-106-001	SHAFT	NAS303R25-0940	CABLE
047-631-109-002	KNOB	NAS303R25-1055	CABLE
047-631-111-002	BEARING	NAS303R27-0852	CABLE
047-631-117-001	SHIM	NAS303R67-1175	CABLE
047-631-119-001	SPACER	P4K	BEARING

047-631-120-002	PLUG	PRB134	RING
047-631-121-007	CROSTUB	S80-902-2	TURNBUCKLE
047-631-122-002	ROD	SB47-120-126-107	PITCH HORN
047-631-124-005	CONTROL	SB47-120-177-001	MR YOKE
047-631-124-008	CONTROL	SB47-120-190-005	BEARING, MR HUB-GIMBAL
047-631-149-001	NUT	SB47-120-250-001	SPRING, DYNAMIC FLAP RESTRAINT
047-631-164-003	CONTROL	SB47-120-253-001	BOLT
047-631-193-001	GRIP	SB47-130-105-003	WASHER, MAST BASE PLUG
047-631-216-001	KEY	SB47-150-034-001	SEAL
047-631-226-001	SPRING	SB47-150-253-003	RACE
047-631-240-011	BOX ASSY	SB47-150-254-001	THRUST WASHER
047-631-246-001	TUBE ASY	SB47-612-152-011	PIN ASSEMBLY
047-631-247-001	JACKSHAFT SUPPORT ASSY	SB47-615-074-017	DUCT
047-631-248-001	END	SB47-620-228-001	LOWER PINION PIN
047-631-254-001	LEVER	SB47-620-235-001	SEAL, TRANS CASE RING
047-631-261-001	LEVER	SB47-620-243-001	GASKET-GENERATOR
047-631-263-005	SHAFT	SB47-620-485-009	SHEAR SCREW
047-631-267-001	LEVER	SB47-620-517-005	CAGE, ROLLER BEARING
047-631-269-001	CLEVIS	SB47-620-616-005	SPRING
047-631-295-001	COVER	SB47-620-619-001	PIN, CLUTCH PIVOT
047-631-306-001	WASHER	SB47-620-619-003	PIN, CLUTCH PIVOT
047-631-332-001	CLEVIS	SB47-620-619-005	PIN, CLUTCH PIVOT
047-631-343-003	SLIP JOINT	SB47-620-628-003	BEARING, INPUT SHAFT TRANS
047-631-346-011	SHAFT AS	SB47-620-671-001	GASKET
047-631-346-013	SHAFT AS	SB47-620-680-001	BEARING
047-631-346-023	SHAFT	SB47-620-692-001	CUTCH SHOE PIVOT PIN
047-631-346-029A	TUBE	SB47-620-929-001	BEARING
047-631-348-003	ADAPTER	SB47-631-348-003	ADAPTER
047-631-353-001	ADAPTER	SB47-631-800-029	THROTTLE CABLE TUBE ASSEMBLY
047-631-361-003	PLATE	SB47-640-055-007	EXTENSION TUBE, TAIL ROTOR
047-631-374-001	CAM	SB47-641-101-001	BOOT
047-631-384-001	BEARING	SB47-641-126-005	TR YOKE
047-631-389-001	SHAFT	SB47-641-176-001	TRUNNION ASSEMBLY, TAIL ROTOR
047-631-801-001	CAM	SB47-641-184-001	BEARING
047-640-006-005	BRACE	SB47-644-220-001	BOOT, TAIL ROTOR GREASE
047-640-047-001	PLUG	SB47-645-239-103	BEARING, TAIL ROTOR DRIVE SHAFT
047-640-066-101	YOKE T/R	SB47-682-174-001	FIRESHIELD
047-640-075-001	GEARBOX	SB47-722-270-021	CABLE ASSY
047-641-096-001	SHIM	SB47-722-273-029	CABLE ASSEMBLY
047-641-098-001	CONE SET	SB47-722-273-101	CABLE ASSY
047-641-100-001	NUT	SB47-727-031-001	PIN, COLLECTIVE PITCH CONTROL
047-641-102-001	CROSSHEA	SI-260	SERVICE INSTRUCTION 260
047-641-103-001	CAP ASSY	SI-355	SERVICE INSTRUCTION 355
047-641-117-001	SPINDLE	SI-358	SERVICE INSTRUCTION 358
047-641-121-001	CAP	SI-363	SERVICE INSTRUCTION 363
047-641-122-001	SHIM	SI-375	SERVICE INSTRUCTION 375
047-641-131-001	BEARING	SI-397	SERVICE INSTRUCTION 397
047-641-149-005	NUT ASSY	SI-409	SERVICE INSTRUCTION 409
047-641-161-001	BEARING	SI-419	SERVICE INSTRUCTION 419
047-641-167-001	BEARING	SI-428	SERVICE INSTRUCTION 428
047-641-171-003	BUSHING	SI-430	SERVICE INSTRUCTION 430
047-641-172-005	LINK ASY	SI-434	SERVICE INSTRUCTION 434

047-641-173-001	THRUST PLUG	SI-435	SERVICE INSTRUCTION 435
047-641-175-001	RACE	SI-436	SERVICE INSTRUCTION 436
047-641-178-003	STOP	SI-437	SERVICE INSTRUCTION 437
047-641-179-005	CONTROL	SI-438	SERVICE INSTRUCTION 438
047-641-180-001	CONTROL	SI-BUNDLE	SERVICE INSTRUCTION BUNDLE
047-641-183-001	END ASSY	SI-INDEX	SERVICE INSTRUCTION INDEX
047-641-186-001	WASHER	T100089	HOISTING RING
047-641-187-007	PITCH HORN	TB-BUNDLE	TECH BULLETIN BUNDLE
047-641-189-003	WASHER	TB-INDEX	TECH BULLETIN INDEX
047-641-190-103	WEIGHT		
047-641-192-001	HOUSING		
047-642-117-105	BLADE T/R		
047-642-119-001	ABRASIVE		
047-642-122-003	BLOCK		
047-644-035-003	NUT		
047-644-130-011	COUPLING		
047-644-131-002	COUPLING		
047-644-136-001	PLUG		
047-644-148-015	HANGER A		
047-644-149-001	RETAINER		
047-644-170-001	HOUSING		
047-644-171-001	SLEEVE		
047-644-180-009	SHAFT ASSY*		
047-644-183-001	HOUSING		
047-644-186-005	SHAFT AS		
047-644-187-019	SHAFT AS		
047-644-188-001	BEARING		
047-644-213-003	HOUSING		
047-644-215-003	PIN		
047-644-216-005	SHIM		
047-644-216-007	SHIM		
047-644-217-003	PLATE		
047-644-233-009	SHAFT		
047-645-026-001	KEY		
047-645-074-001	SHIM		
047-645-075-001	SHIM		
047-645-076-001	NUT		
047-645-087-001	BEARING		
047-645-088-001	BEARING		
047-645-090-001	WASHER		
047-645-093-001	KEY		
047-645-204-005	SLEEVE A		
047-645-205-003	SHAFT		
047-645-206-003	WASHER		
047-645-212-015	CASE ASY		
047-645-213-001	SHIM		
047-645-233-001	SIGHT GLASS		
047-645-234-001	ADAPTER		
047-645-238-003	BEARING		
047-645-266-001	CAP ASSY		
047-645-269-001	SHAFT		